

deal worthy™

4000mAh Power Bank

Instruction Manual


Package Contents

- Power bank - 1
- Micro USB Charging Cable - 1


Compatibility

- Compatible with most mobile phones


Power Bank Instructions

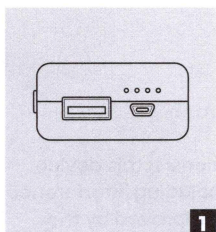


The power bank has Micro USB in and USB-A out ports, power button and power indicators.

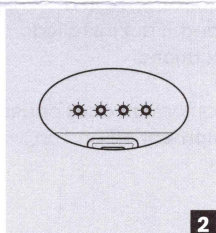

Power indicators:
One light: 0 - 24% charged
Two lights: 25 - 49% charged
Three lights: 50% - 74% charged
Four lights: 75% - 100% charged

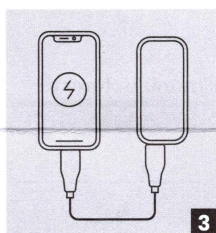

Using the USB charging cable for your device, plug the USB end into your power bank and the charging tip specific to your device into your device. The LED lights will continue to display the amount of charge remaining as the power bank charges your device.

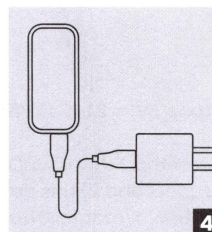

Using the USB cable provided, plug into a USB power supply of at least DC 5V 2A.

warning:
please use UL compliant power supply

The power bank requires approximately 2.5 hours to fully charge but may take longer.

The LED lights will light up showing the percentage of power. When it is fully charged all 4 LEDs will illuminate.

A fully charged power bank will last 6 months minimum when not in use. In order to increase the longevity of your power bank, it is recommended that it is used regularly and charged when the bank has been fully drained. Avoid extreme temperatures including leaving the power bank in direct sunlight for extended periods of time.

Note: Micro USB does not transfer data

Important Safety Instructions:

WARNING When using this product, basic precautions should always be followed, including the following:

- Read all of the instructions before using the product
- To reduce the risk of injury, close supervision is necessary when the product is used near children
- Do not put fingers or hands into the product
- Do not expose power bank to rain or snow
- Use of a power supply or charger not recommended or sold by the power bank manufacturer may result in a risk of fire or injury to persons
- Do not use the power bank in excess of its output rating. Overload outputs above rating may result in a risk of fire or injury to persons
- Have servicing performed by a qualified repair person using only identical replacement parts, this will ensure that the safety of the product is maintained
- Do not disassemble the power bank if repair is required. Incorrect assembly may result in a risk of fire or injury to persons
- Do not expose to fire or excessive temperature. Exposure to fire or temperature above 212°F (100°C) may cause the powerbank to explode
- Have servicing performed by a qualified repair person using only identical replacement parts, this will ensure that the safety of the product is maintained.
- Switch off the power bank when not in use

SAVE THESE INSTRUCTIONS

Model: PB41 Input: 5V = 2A Output: 5V = 2.1A 3.7V/4000mAh/14.8Wh Power Bank capacity: 2400 mAh
Made in China

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation. Warning: Changes or modification to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Target Corp. Mpls. MN, 55403 Phone: 612-304-6073

For qualified repair specialists requesting repair information and parts please contact the original manufacturer at customersupport@gemsfindyours.com

Just what you need, priced just right.™
100% Satisfaction Guaranteed or your Money Back.



We welcome any questions you may have at
[Target.com/comments](https://target.com/comments) or 1-800-910-6874.